

MIC-C120-DH 2174662

Hilti North America Installation Technical Manual Technical Data MI System

Version 1.2 08.2017



Terms of common cooperation / Legal disclaimer


The product technical data published in these Technical Data Sheets are only valid for the mentioned codes or technical data generation methods and the defined application conditions (e.g. ambient temperature load capacity not valid in case of fire, data not valid in support structures when mixed with third party products, values only apply to static loading conditions). Technical data applies to the component only -- suitability and capacity of all other components must be checked separately by the responsible engineer (e.g., other assembly components, attachments, base materials, and building structures).

Suitability of structures combining different products for specific applications needs to be verified by conducting a system design and calculation, using for example Hilti PROFIS software. In addition, it is crucial to fully respect the Instructions for Use and to assure clean, unaltered and undamaged state of all products at any time in order to achieve optimum performance (e.g. avoid misuse, modification, overload, corrosion).

As products but also technical data generation methodologies evolve over time, technical data might change at any time without prior notice. We recommend to use the latest technical data sheets published by Hilti.


In any case the suitability of structures combining different products for specific applications need to be checked and cleared by an expert, particularly with regard to compliance with applicable norms, codes, and project specific requirements, prior to using them for any specific facility. This book only serves as an aid to interpret the capacity of the components listed, without any guarantee as to the absence of errors, the correctness and the relevance of the results or suitability for a specific application. User must take all necessary and reasonable steps to prevent or limit damage. The suitability of structures combining different products for specific applications need to be confirmed with a professional designer and/or structural engineers to ensure compliance with User's specific jurisdiction and project requirements.



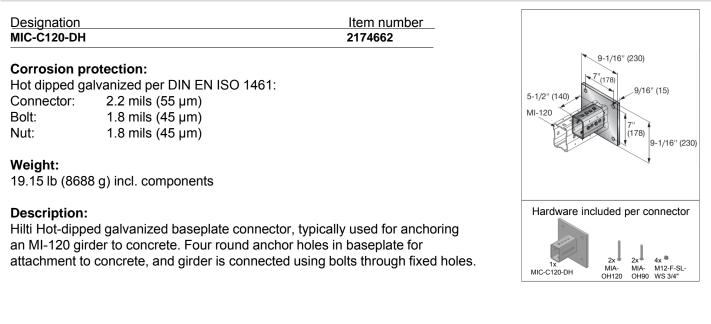

Material properties Material Connector:	Yield strength	Ultimate strength	E-modulus	Shear modulus
S235JR - DIN EN10025-2 2005.4 One hand screw, prevail torgue hex nut	$f_y = 34.08 \text{ ksi} (235 \frac{N}{mm^2})$	f _u = 52.21 ksi (360 $\frac{N}{mm^2}$)	29000 ksi (200000 $\frac{N}{mm^2}$)	11000 ksi (75845 <u></u>)
Class 8.8 - DIN EN 1993-1-8	$f_y = 92.82 \text{ ksi} (640 \frac{N}{mm^2})$	$f_u = 116.03 \text{ ksi} (800 \frac{N}{mm^2})$	29000 ksi (200000 $\frac{N}{mm^2}$)	11000 ksi (75845 <u></u>)

Instruction For Use:

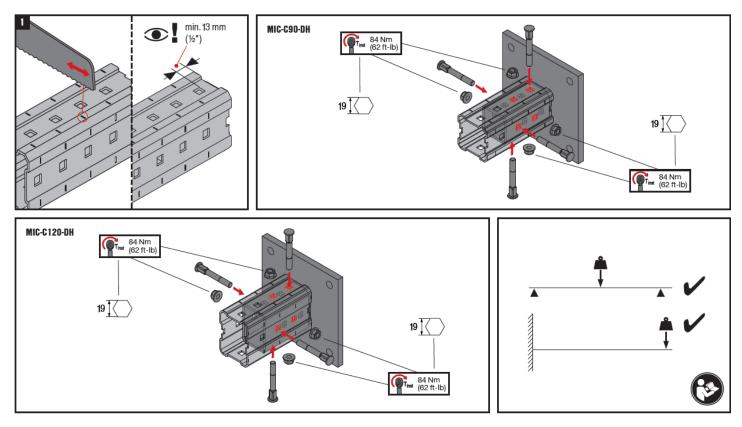



Approved load		
Standard		

Governing Conditions

Methodology:

Connection strength values are determined with a combination of simulation (ANSYS[®]), calculation (Microsoft Excel and Mathcad) and testing.


Standards and codes:

•	ANSI/AISC 360-10	Specification for Structural Steel Buildings	
•	AISC Steel Design	Guide Series 1 Column Base Plates	
•	AISI S100-	North American Specification for the Design of	
	2007/2010	cold-formed Steel Structural Members	
•	ACI 318-08/11	Building Code Requirement for Structural Concrete	
•	EN 1993-1-1	Eurocode 3: Design of steel structures – Part 1-1:	03.2012
		General rules and rules for buildings	
•	EN 1993-1-8	Eurocode 3: Design of steel structures – Part 1-8:	03.2012
		Design of joints	
•	EN 10025-2	Hot rolled products of structural steels- Part 2: technical	02-2005
		delivery conditions for non-alloy structural steels	


Validity:

Temperature limits: -22°F (-30°C) to 200°F (+93°C).

Published allowable loads for applications are based on static loading conditions. Non-static forces, including those resulting from thermal or other expansion must be taken into account during design.

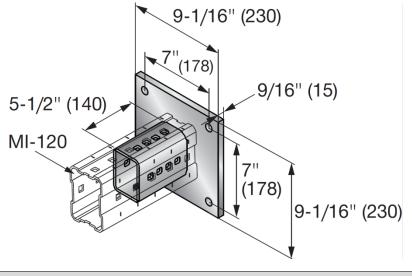



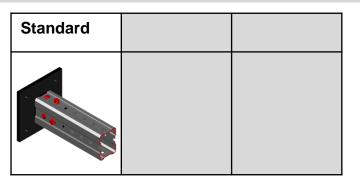

Loading case: Standard	Combinations covered by loading case	
Bill of Material for this loading case: 1x MIC-C120-DH 2174662	Baseplate connector used for a perpendicular connection of an MI-120 girder to concrete	


Usage of Values for Design Strength and Allowable Strength

The Design Strength and Allowable Strength tables on the following pages include strength reduction factors:


- 1. <u>ASD:</u> Safety Factor (omega) > 1.0 as per AISC specifications.
- 2. <u>LRFD</u>: Strength Reduction Factor (phi) < 1.0 as per AISC specifications. $\Omega = \frac{1.5}{6}$ (Reference AISC 360 C-B3-5)

Factored loads are required for input to the given interaction equations. Factored loads are the responsibility of the user. Factored loads are noted as P, V and M

Limiting components of capacity evaluated in following tables:

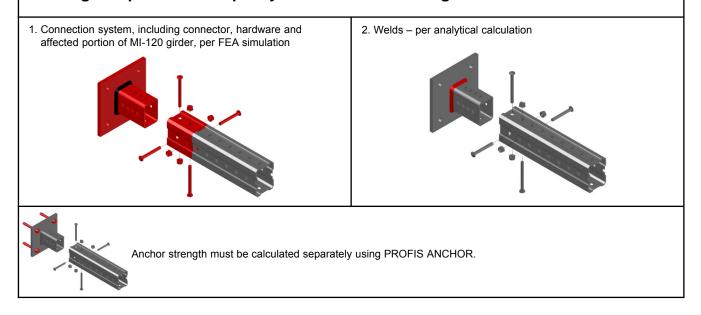



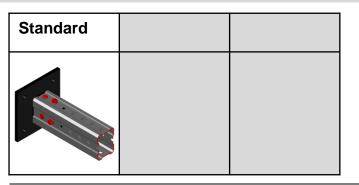


Values for Design Strength and Allowable Strength


1/2

NOTE: Calculate interaction separately for each group only using values from that group. Limiter is defined by highest interaction. Use absolute values. Values refer to the coordinate system shown.

11. Connection system, including connector, hardware and affected portion of MI-120 girder, per FEA simulation

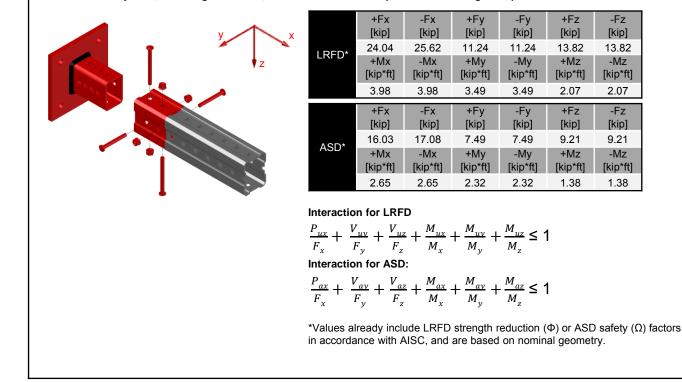



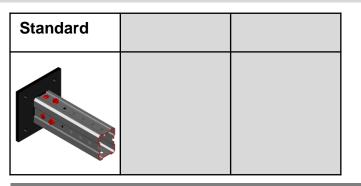


Values for Design Strength and Allowable Strength

2/2

NOTE: Calculate interaction separately for each group only using values from that group. Limiter is defined by highest interaction. Use absolute values. Values refer to the coordinate system shown.

2. Welds - per analytical calculation

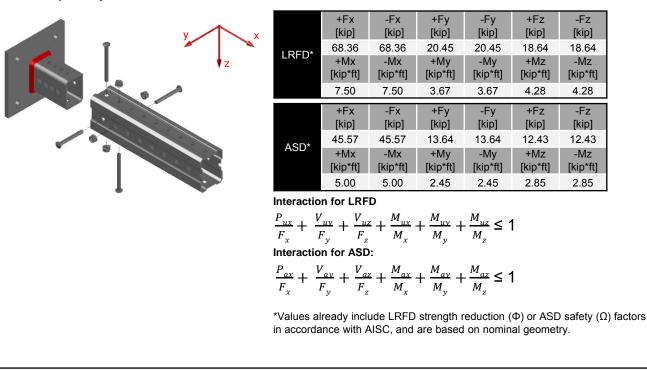



In the US: Hilti, Inc. (U.S.) P.O. Box 21148 Tulsa, OK 74121 Customer Service: 1-800-879-8000 en español: 1-800-879-5000 Fax: 1-800-879-7000

www.us.hilti.com

Hilti is an equal opportunity employer Hilti is a registered trademark of Hilti, Corp. ©Copyright 2017 by Hilti, Inc. (U.S.)

In Canada:

Hilti (Canada) Corporation 2360 Meadowpine Blvd. Mississauga, Ontario, L5N 6S2 Customer Service: 1-800-363-4458 Fax: 1-800-363-4459

www.hilti.ca

The data contained in this literature was current as of the date of publication. Updates and changes may be made based on later testing. If verification is needed that the data is still current, please contact the Hilti Technical Support Specialists at 1-800-879-8000 (U.S.) or 1-800-363-4458 (Canada). All published load values contained in this literature represent the result of testing by Hilti or test organizations. Local base materials were used. Because of variations in materials, on-site testing is necessary to determinate performance at any specific site.